

# ZZZ 241 DM installation instructions

- 1**
- Remove skylight cladding.
  - Loosen screws securing solar panel to skylight.
  - Lift panel up from mounting brackets.
  - Unplug solar panel connector and remove solar panel completely.



- 2**
- Plug female end of extension wire into male end at bottom of skylight.



- 3**
- Use wire clamps (provided) to secure wire across bottom, and up the side of skylight.




- 4**
- Replace cladding around skylight.
  - Route extension wire below cladding, where cladding slips behind head flashing on top side of skylight.



# ZZZ 241 DM installation instructions

- 5**
- Plug end of extension wire into solar panel connector.
  - Place connector and extra wire under aluminum panel where plug exits solar panel.

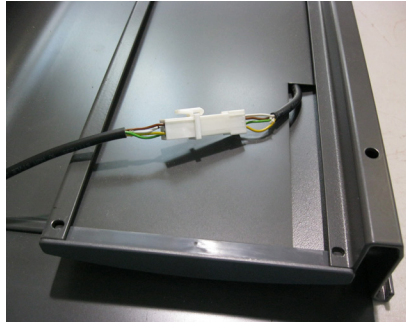

- 6**
- Crimp head flashing.



- 7**
- Place solar panel over top of head flashing.
  - Center it between sides of skylight.



- 8**
- Place piece of 1" putty over each screw slot on solar panel.
  - DO NOT PRE-DRILL HOLES.
  - Secure panel with #10 X 1/2" self-tap screws provided.

