

# A21 Skylight Retrofit Application To VELUX® ECX Curb

1

## Existing VELUX ECX curb and counter flashing

- a. Remove skylight cladding and retain for reinstallation.
- b. Remove top counterflashings, sill piece, and two side covers from curb and retain for reinstallation.
- c. Remove skylight from curb.



2

## Prepare new skylight for installation

- a. Remove nails from Deck Seal.

**NOTE:** Use caution to avoid skylight damage.



3

## Prepare new skylight for installation

- a. Move Deck Seal upward on skylight frame by 1". (*For VS or VSE skylight, see step 3a before proceeding to Step 4.*)
- b. Secure deck seal to skylight frame with screws. **Screw length must not exceed 3/4"!**




## A21 Skylight Retrofit Application To VELUX® ECX Curb

3a

### Prepare new VS/VSE skylight for installation

Deck Seal must be removed and notched at top corners. Notch must be  $\frac{1}{2}$ " x  $1\frac{3}{4}$ ". Reinstall Deck Seal on skylight with notches at top corners.

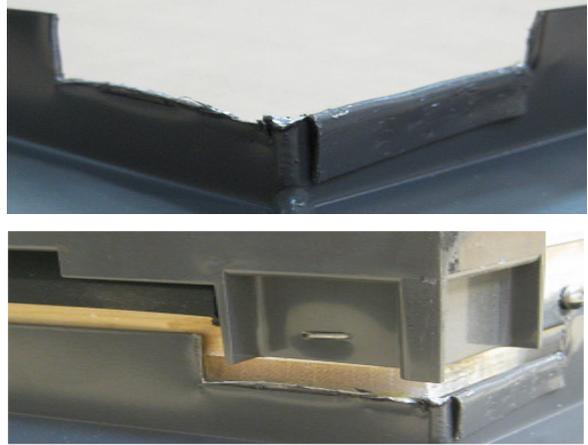

4

### Helpful Hint!

To move Deck Seal upward, apply downward pressure, avoiding damage to skylight cladding, while lifting Deck Seal up.



5

### Install skylight on curb

- a. Secure skylight to curb with fasteners provided.
- b. Consider wrapping skylight with underlayment.

**NOTE:** Ensure underlayment used for wrapping skylight is compatible with roofing material around curb.



## A21 Skylight Retrofit Application To VELUX® ECX Curb

**6**

### Re-install counter flashing sill piece

- d. Modify by removing tab from sill section side pieces, as shown in photo at right.
- e. Install modified sill counter flashing to bottom of curb and skylight.
- f. Place sill counter flashing behind bottom frame rubber gasket.

**7**

### Re-install two side frame counter covers

- a. Trim 3/4" from two side frame counter flashings as shown in photo at right.
- b. Install side frame counter flashing to each skylight side frame.
- c. Install two skylight side frame claddings.



## A21 Skylight Retrofit Application To VELUX® ECX Curb

**8**

### Re-install counter flashing top piece

- a. Place top counter flashing over skylight top gutter and secure with screws.

**NOTE:**

EDL Filler piece will be required for proper fit of top counter flashing to top gutter.

Contact VELUX Customer Service (1-800-888-3589) to order EDL Filler piece.

