

Accessory tray minimum openings

1 Minimum openings for ZZZ 199 accessory tray.

These dimensions are from outside screw head to outside screw head.


Size Code	Dimension	Size Code	Dimension
2222	21-1/8" x 21-1/8"	3030	29-1/8" x 29-1/8"
2230	21-1/8" x 29-1/8"	3046	29-1/8" x 45-1/8"
2234	21-1/8" x 33-1/8"	3434	33-1/8" x 33-1/8"
2246	21-1/8" x 45-1/8"	3446	33-1/8" x 45-1/8"
2270	21-1/8" x 69-1/8"	4622	45-1/8" x 21-1/8"
		4646	45-1/8" x 45-1/8"

2 The gasket may need to be removed when the tray is installed in openings that are close to the minimum size.



Gasket can be removed

3 The finish material can be trimmed or installed below the tray. Finish material should be cut down at least 2 1/4" below the top of the curb to allow for blind rail clearance.

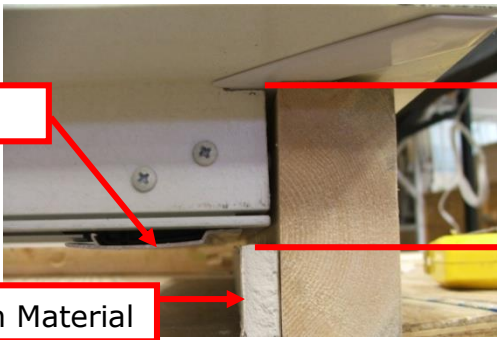

Blind rail

Finish Material

2 1/4"

4 In cases where the accessory tray overhangs the exterior of the curb, cut the excess with a jig saw or reciprocating saw. This will allow the skylight to fit over the curb and tray.



Cut to fit