


ZZZ 241 CM installation instructions

- 1**
- Remove screws securing solar panel (retain for re-installation)
 - Remove solar panel
 - Disconnect wire connector




- 2**
- Remove screws securing VCS to curb.
 - Place VCS upside down on a scratch free surface (such as cardboard or a drop cloth).

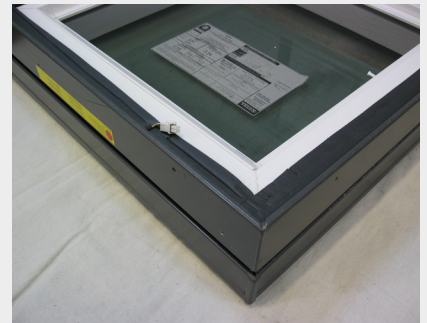

- 3**
- Plug female end of extension wire into male end of wire coming from bottom of VCS.




- 4**
- Tuck wire extension into "J" channel at bottom of skylight frame until wire reaches top of center of skylight.

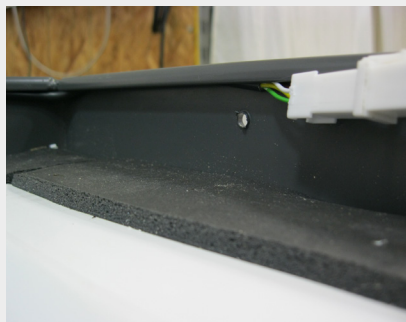

ZZZ 241 CM installation instructions

- 5** • Replace skylight over curb and secure skylight to curb with screws

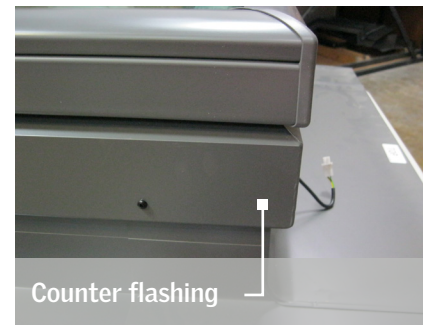

- 6** • Place solar panel at top of VCS with top panel level to top counter flashing, and centered as shown.
- Place mark on skylight frame at top of slots on solar panel.



- 7** • Use 9/64" drillbit to make a pilot hole 1/4" deep on the marks (pilot hole should only penetrate counter flashing).
- Insert screws from step 1 into hole, leaving enough room for solar panel to fit.



- 8** • Connect solar panel wire into extension wire.
- Place extension connector and extra wire under aluminum panel where plug exits solar panel.
- Place solar panel slots over screws and tighten screws.

