

VELUX SUN TUNNEL™ SKYLIGHT SUPPLEMENTAL INSTRUCTIONS



In order to conform to Hallmark certification, additional foam tape must be applied between the dome and the flashing, the condensation holes must be sealed, and additional nails must be used when securing the flashing to the roof deck.

**Instructions contained on this sheet are not applicable for VELUX SUN TUNNEL skylights installed in Canada.
Les instructions pour le VELUX SUN TUNNEL sur ce feuillet d'installation ne sont pas applicable au Canada.**

- ① To apply the foam tape, remove the backing from the foam rubber strip to expose the adhesive backing.

Apply the foam rubber around the upper edge of the black flashing collar. Apply so that two-thirds of the material is on the flat vertical surface and one-third will extend above the edge. This extra material will be folded around to create a good seal with the dome.





- ② Apply the tape all the way around the edge and cut off any excess.



- ③ Fold the top one-third of the foam rubber tape over and around the top edge of the flashing.



- 4** Place the foam tape over the condensation drain holes.

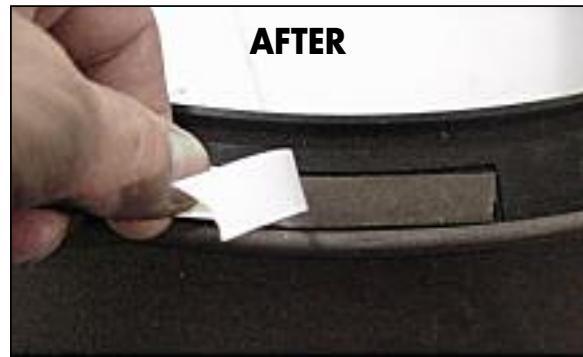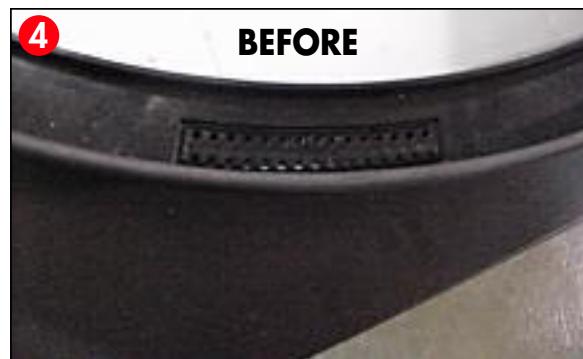

- 5** The flashing should be fastened to the roof deck with four nails on each outside edge as illustrated in the standard instructions. Also included are eleven additional nails for around the dome.

Start at the top and stay at least $4\frac{1}{2}$ " away from the up stand of the flashing and space the remaining five nails on each side, leaving 6 inches between each nail. The yellow dots represent the nail pattern to be used on a 22 inch flashing. Apply sealant to the roof deck prior to installing flashing and over the nail heads after the flashing is installed.



- 6** For fire rated roofs, install the optional dome edge protection.

